

# MANUAL RELEASE INSTRUCTIONS

for

## GDS Series Swing Gate Operators Drives

### Models GDS180-4, 370-6, 370-7, 370-8

Should the power fail or for some other reason the gate does not operate in the normal motorised manner, manual disconnection can be achieved by:-

- Turn power off to the control box and isolate. Using key to open side door on gate operator cover,



- Turn knurled disc anticlockwise for arm to be released from gearbox.



- If a magnetic lock is fitted, turn off the power to the control box.
- If an electric lock is fitted, release with the electric lock key provided.



The gate will now open manually. Ensure gate is held firm so it does not close on someone or something.

- To engage drive, turn knurled knob clockwise until tight. Close and lock cover door with key.